

# Spark Vinyl Window Graphics

## Installation Guide – Wet Application Method



Your vinyl graphics arrives to you with two or three layers:

1. The top layer is the application tape.
2. The middle layer is the self-adhesive vinyl graphics.
3. The bottom layer is the backing paper.

(Vinyl should be applied in a wind free environment at room temperature.  
It will not adhere if it is too cold.)

### Installation Questions?

Call our customer service team at


**888.273.8726**

### Tools Required

- ☐ Squeegee (included)
- ☐ Soft Cloth
- ☐ Masking Tape
- ☐ Ruler
- ☐ Wax Pencil
- ☐ Spray Bottle containing lukewarm water with a few drops of liquid soap.

### Preparation:

1. The surface must be thoroughly cleaned and free of all oils, waxes, dust and dirt preferably 2-4 hours in advance of installation.
2. On a flat table, with the application tape side up, use your squeegee to wipe over the whole of the lettering using plenty of pressure. This will stick the lettering to the application tape and release it from the backing paper.
3. Mark guidelines to the surface of the substrate with the wax pencil.

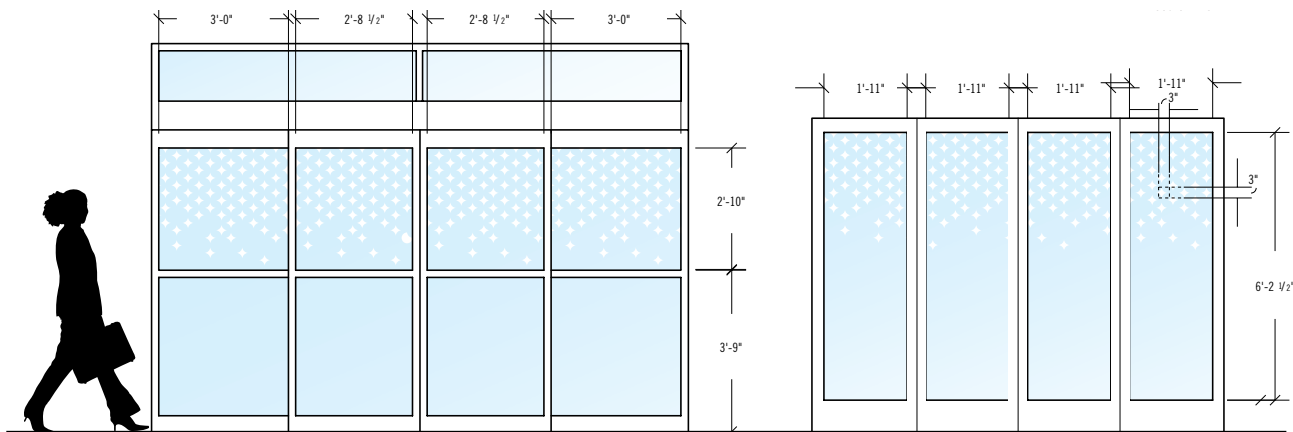

### Installation Instruction:

4. With the lettering face down on a flat surface, carefully peel off the backing paper away from the lettering.
5. Spray generously the area where the vinyl is to be applied with your wetting solution. Spray the vinyl lightly.
6. Place the vinyl on the prepared surface using the guidelines to help position it. Lettering can be removed and repositioned as long as the surface stays wet.
7. When you are happy with the position, use your squeegee to force the bubbles and fluid out. Start at the center and work your way out. Be sure to squeegee as much solution as possible from under the decal. Take your time, because if not enough solution is removed from under the vinyl, it will not adhere to the surface.
8. Allow to dry for about an hour.
9. Gently and slowly peel back the application tape diagonally, keeping your hand firmly on the lettering to prevent it pulling back up. Note if the lettering is not sticking to surface, repeat the squeegee process and let dry longer.
10. Remove any remaining bubbles and fluid with a soft cloth and leave to dry for a couple hours.

