

Spark Vinyl Window Graphics

Installation Guide – Dry Application Method



NOTE: Vinyl graphics should be installed by a professional installer.

Your vinyl graphic arrives to you with three layers:

1. The top layer is the application tape.
2. The middle layer is the self-adhesive vinyl graphic.
3. The bottom layer is the backing paper.

**This product is designed to be applied without the use of application fluid. Because this material has spaces in the adhesive to let the air out, it must be applied dry. If an application fluid is used, the liquid can become trapped in the spaces in the adhesive. The air-egress technology allows for fast bubble-free applications.*

Installation Questions?


Call our customer service team at
888.273.8726

Tools Required:

- Squeegee (included)
- Soft Cloth
- Masking Tape
- Level
- Tape Measure
- Wax Pencil

Preparation:

1. The surface must be thoroughly cleaned and free of all oils, waxes, dust and dirt a few minutes in advance of installation.
2. On a flat table, with the application tape side up, use your squeegee to wipe over the whole of the vinyl graphic using plenty of pressure. This will stick the vinyl graphic to the application tape and release it from the backing paper.
3. Mark guidelines to the surface of the substrate with the wax pencil.

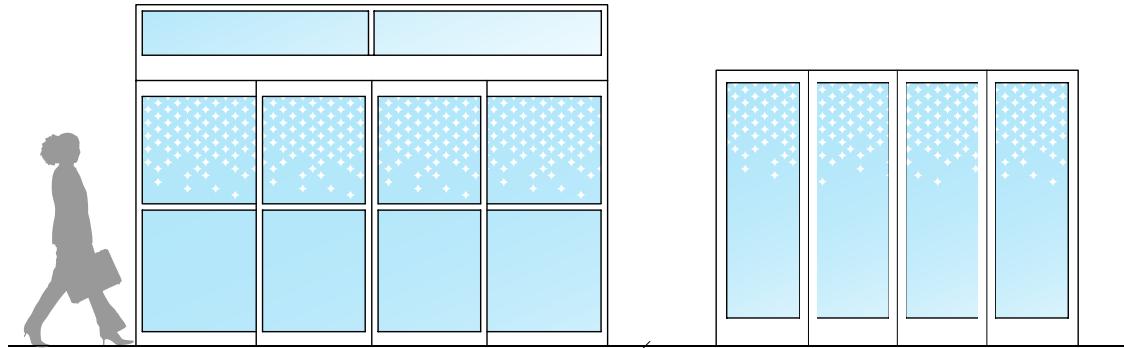

Installation Instructions:

**The vinyl graphic should be applied in a wind-free environment at room temperature.*

4. Remove 1 to 2 inches of the liner from one edge of the graphic.
5. Carefully position the vinyl graphic onto the surface. Line up all the edges and position in the desired location, using masking tape to hold in place. Once the vinyl graphic is in the appropriate location, tack it down with the exposed adhesive.
6. Begin to apply the vinyl graphic with the enclosed felt squeegee. Use light, even pressure and work from the top of the vinyl graphic down.
- CAUTION:** using a hard squeegee may result in squeegee marks in the finished vinyl graphic. You will need to use light pressure due to the nature of an air-egress adhesive with a clear film. We recommend practicing your pressure first, until you understand the touch needed.
7. Go over the vinyl graphic one more time with short, overlapping strokes from the center out. Use a little more pressure this time to ensure a strong bond.
8. Once you are sure the vinyl graphic is securely attached to the glass, carefully remove the application tape starting at the top and pulling it at a 180° angle back over itself. Then rub the entire vinyl graphic with the felt section of the squeegee.
9. Finally, slowly re-squeegee all edges with the felt squeegee to ensure good contact with the window surface.



888.273.8726 | fax. 423.698.2864

email: emailus@hotelsigns.com

2156 Amnicola Hwy, Chattanooga, TN 37406

www.HOTELSIGNS.com

INST1073b_042325 ©2023 HOTELSIGNS.com